

STORAGE BOX KIT



P/N 2889199


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.

KIT CONTENTS

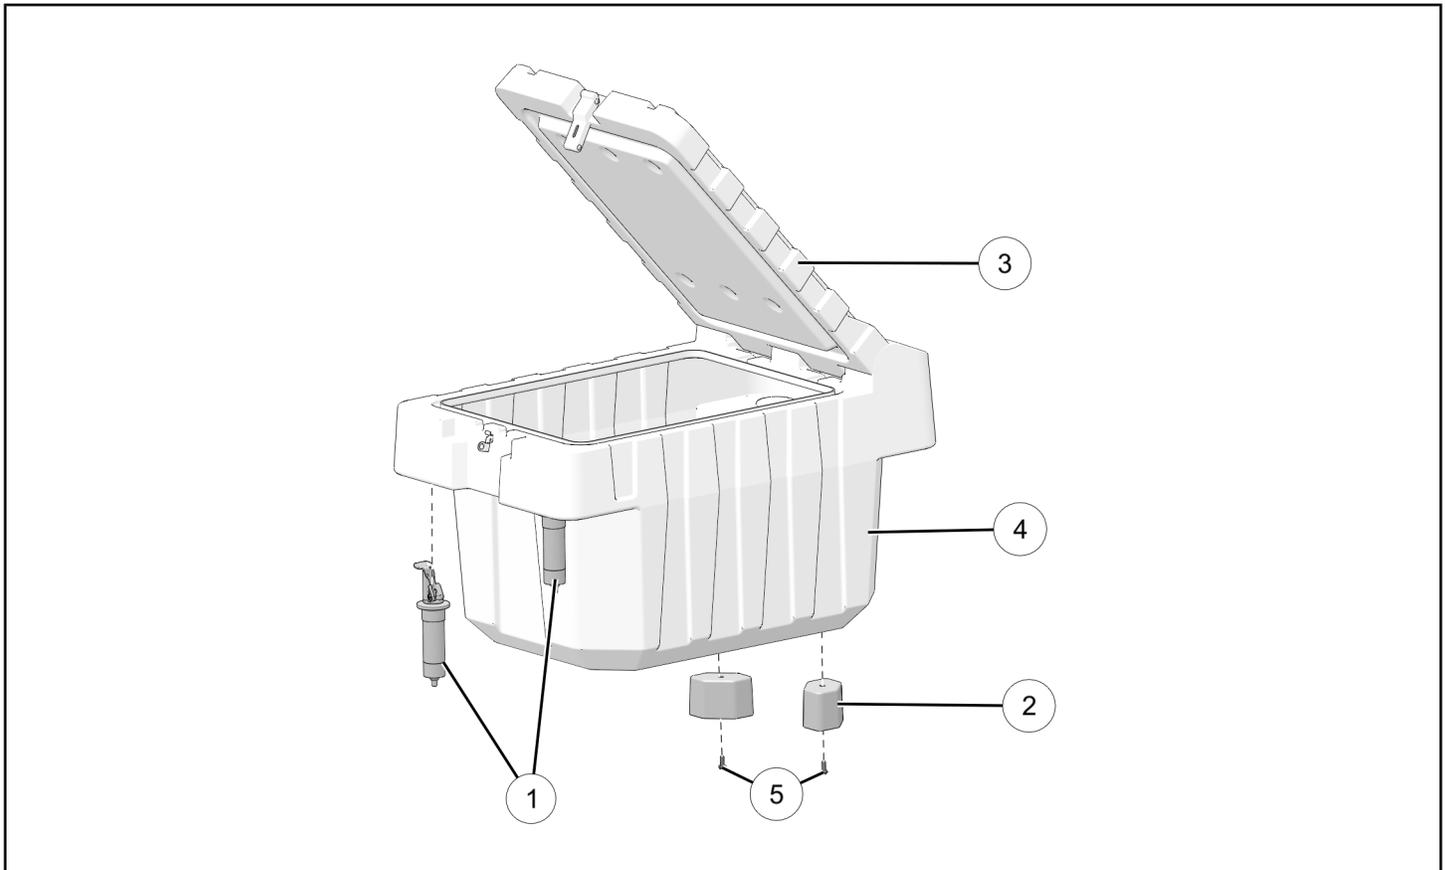

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	2	Lock & Ride® Anchor	n/a
2	2	Bumper	5417833
3	1	Lid	5450028
4	1	Storage Box	n/a
5	2	Screw-Hex Flange, M6 x 1.0 x 15 mm	7519066

TOOLS REQUIRED

- Safety Glasses
- Screwdriver, Phillips
- Socket Set, Metric

IMPORTANT

Your Storage Box Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Park vehicle on a flat surface.
2. Shift vehicle into PARK.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION


1. Remove and keep screw, nut, clamp, and washer.

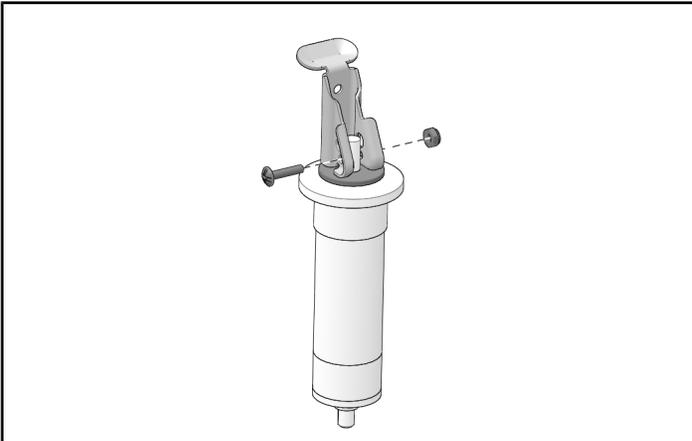

2. Install Lock & Ride® anchors.

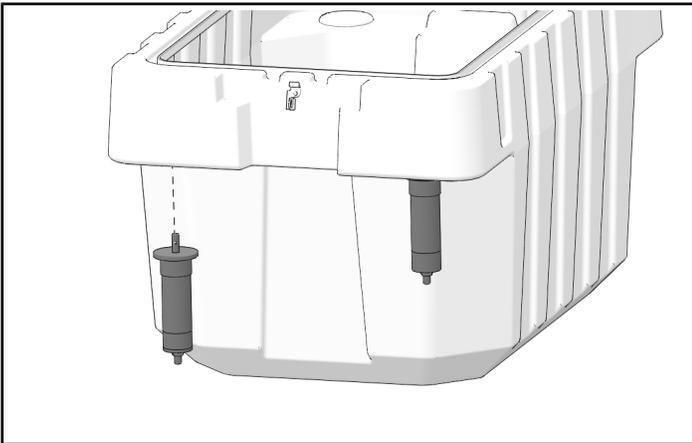


3. Install kept washer, clamp, screw, and nut.

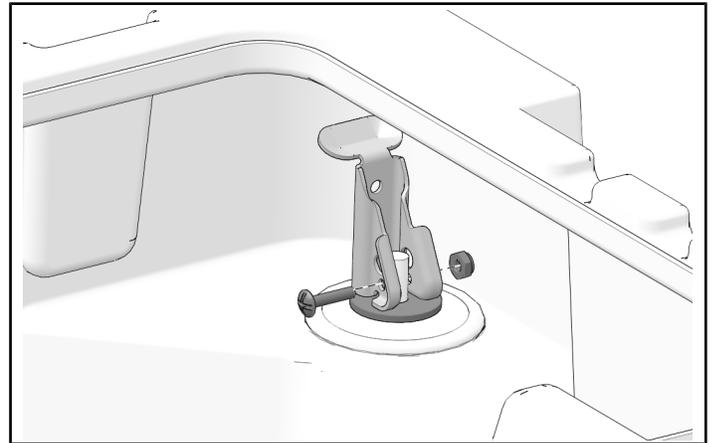


4. Install feet ② with screws ⑤.


NOTICE
Do not overtighten screws.

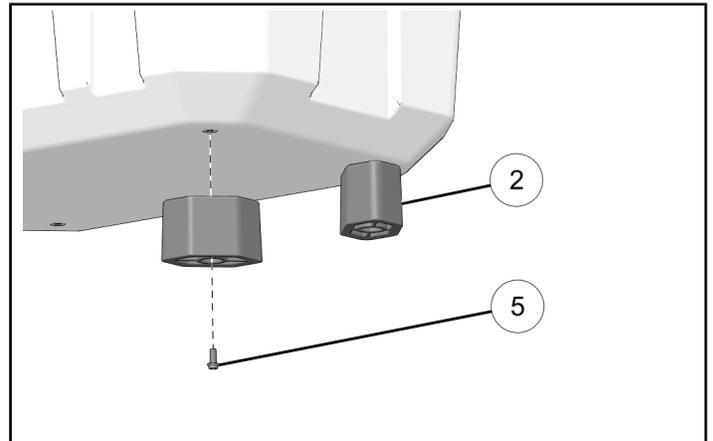


5. Lock & Ride® assemblies may require adjustment. Adjust fitment by tightening or loosening bottom nut.

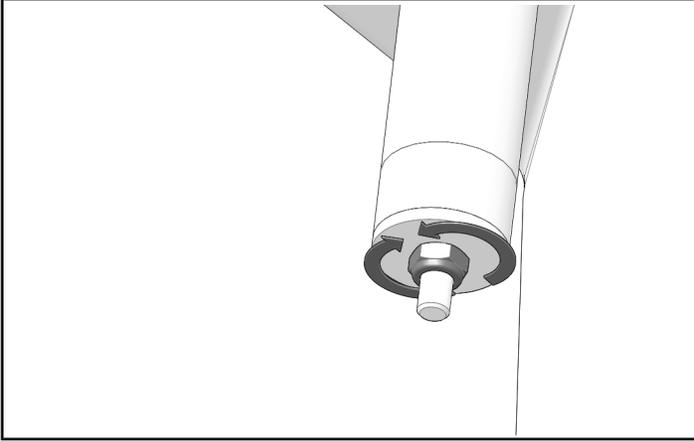

7. Close Lock & Ride® anchors

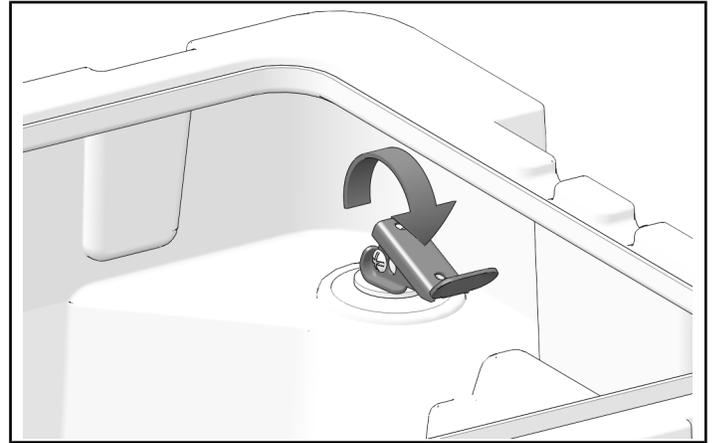

6. Install storage bin.

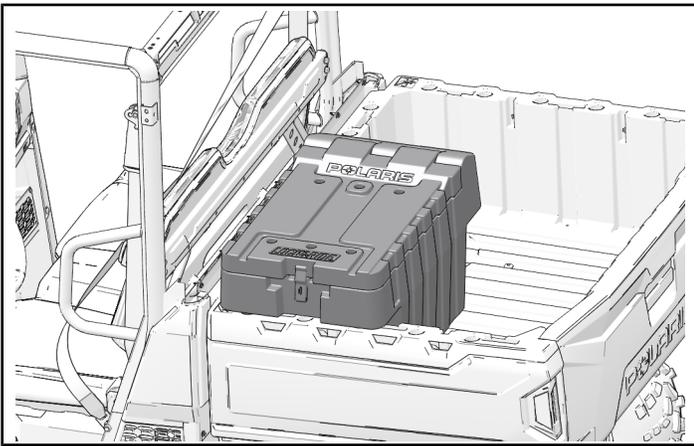

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

