

REAR VIEW MIRROR KIT


P/N 2879969

Application

RANGER 570, RANGER ETX, RANGER XP 900



Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

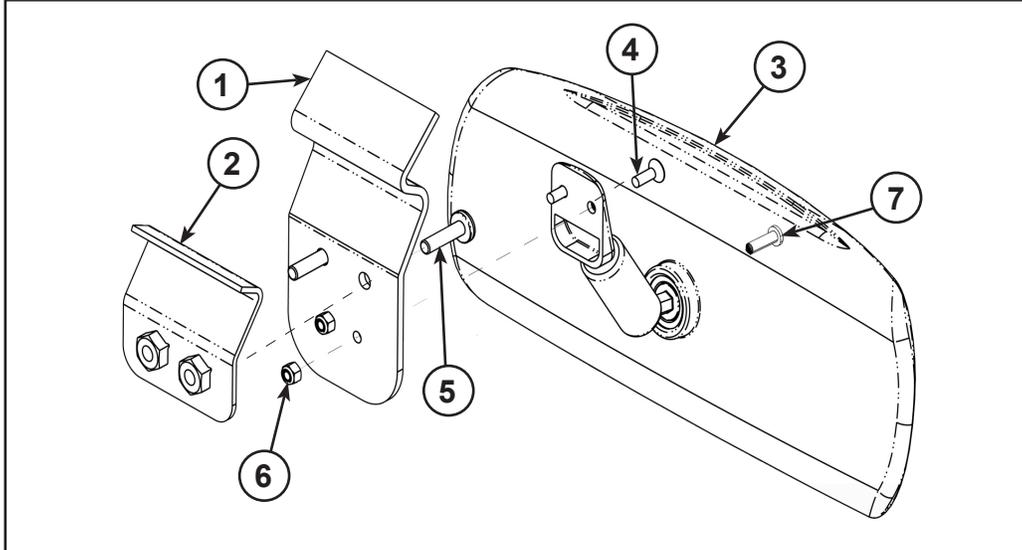

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	1	Mirror Main Bracket	5260278
2	1	Mirror Support Bracket	5258148
3	1	Parabolic Mirror, Black	-
4	2	Screw, PHFH-M4X0.7X8 ZB3	-
5	2	Screw, PHPHD-M6X1.0X10 ZB3	-
6	2	Nut, Hex-M4X0.7, Nyloc ZB3	-
7*	2	Screw-#8X3/4-HI/LO-PN-T20, TRX-M	7518227
	1	Instructions	9925424

Item marked with (*) is an optional and used for installing Rear View Mirror Kit on Ranger 900 XP with Wiper Kit pre-installed.

Tools Required:


#2 Phillips Screwdrivers

APPROXIMATE ASSEMBLY TIME: 10 minutes

IMPORTANT: Your Polaris REAR VIEW MIRROR KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS (For Ranger 570, Ranger ETX):

1. Park the vehicle. Turn the key to "OFF" position and remove from the vehicle.
2. Align the mirror with the welded bracket and fix it with two M4 screws and relevant nuts. Figure 1.

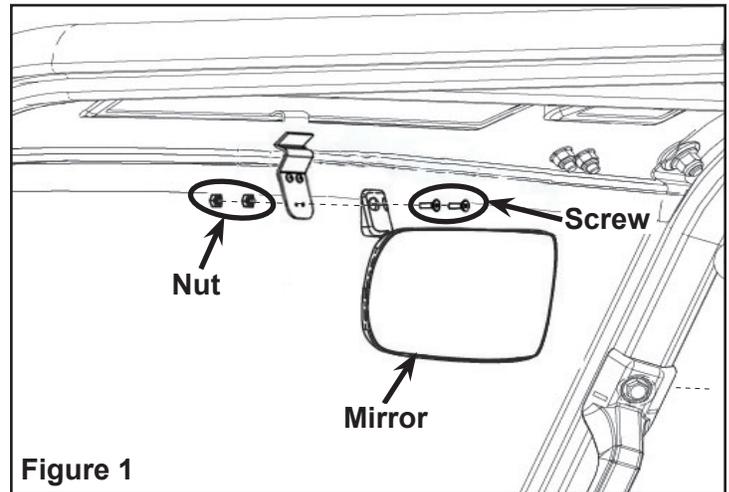


INSTALLATION INSTRUCTIONS: For Ranger XP 900 (Without Wiper Kit Installed)


1. Remove the windshield.
2. Mount both the main bracket (PN 5260278) and support bracket (PN 5258148) on the center of the upper trim such as the inner bracket should be inside and outer bracket should be on outside as shown. Tighten with two M6 screws. Figure 2.

NOTE: Both the brackets should match the profile of the upper trim.

3. Re-install the windshield.

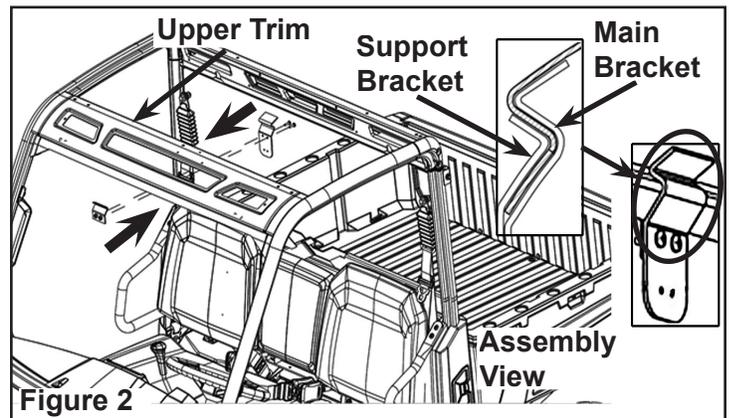


4. Mount the mirror on the bracket with two M4 screws and relevant nuts. Figure 3.

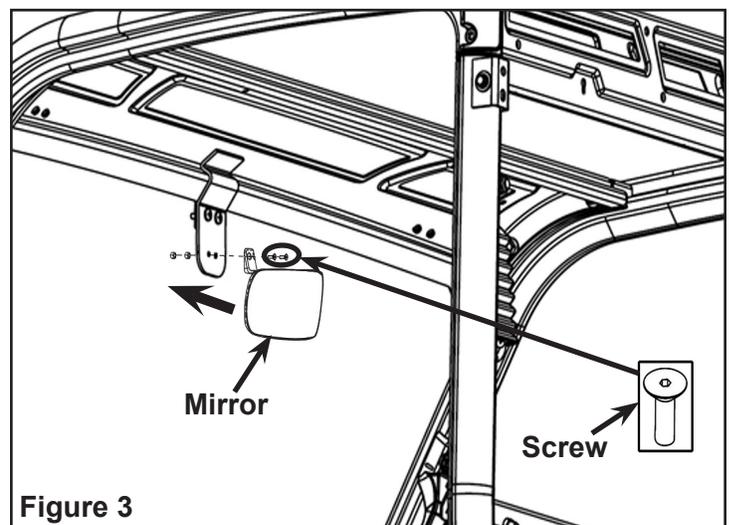


For Ranger XP 900 (With Wiper Kit Installed)


1. Remove two switches from wiper box. Figure 4.

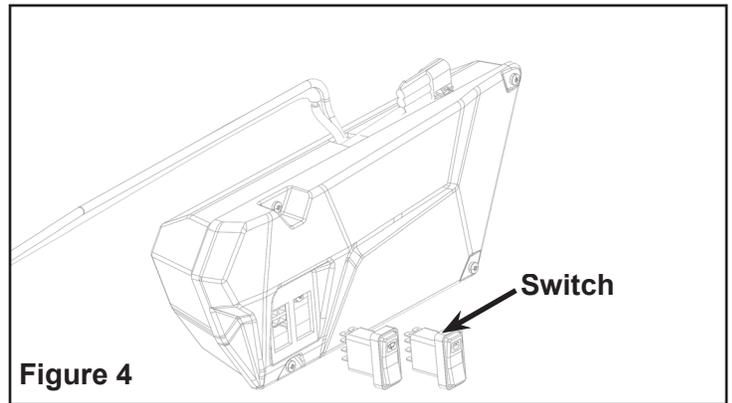

2. Remove the wiper box cover by removing four #10X3/4 screws. Figure 5.

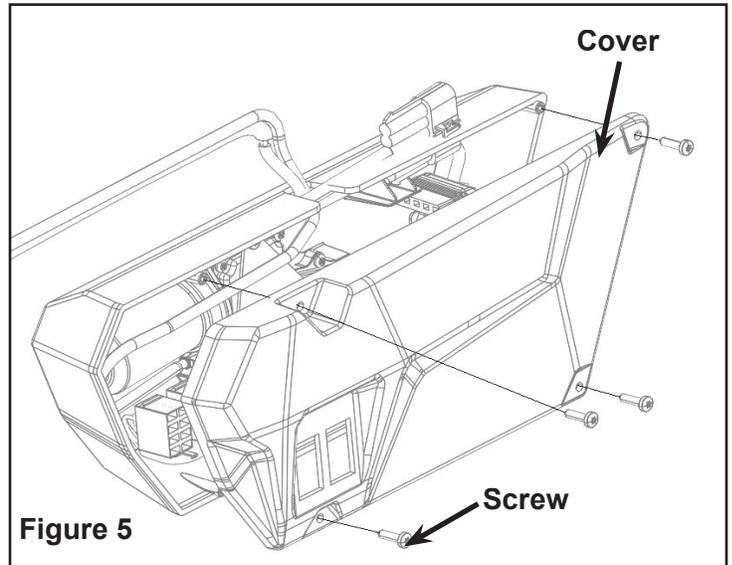

3. Drill two holes of size #36 (0.1065") in the boss of wiper box cover from inside. Re-install the cover and switches. Figure 6.

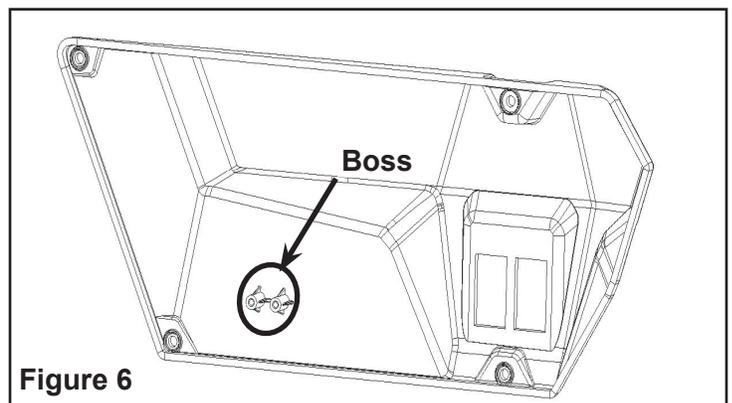

4. Install the mirror on the wiper box using two screws (PN 7518227). Figure 7.

